


Electronic Chemicals

Honeywell

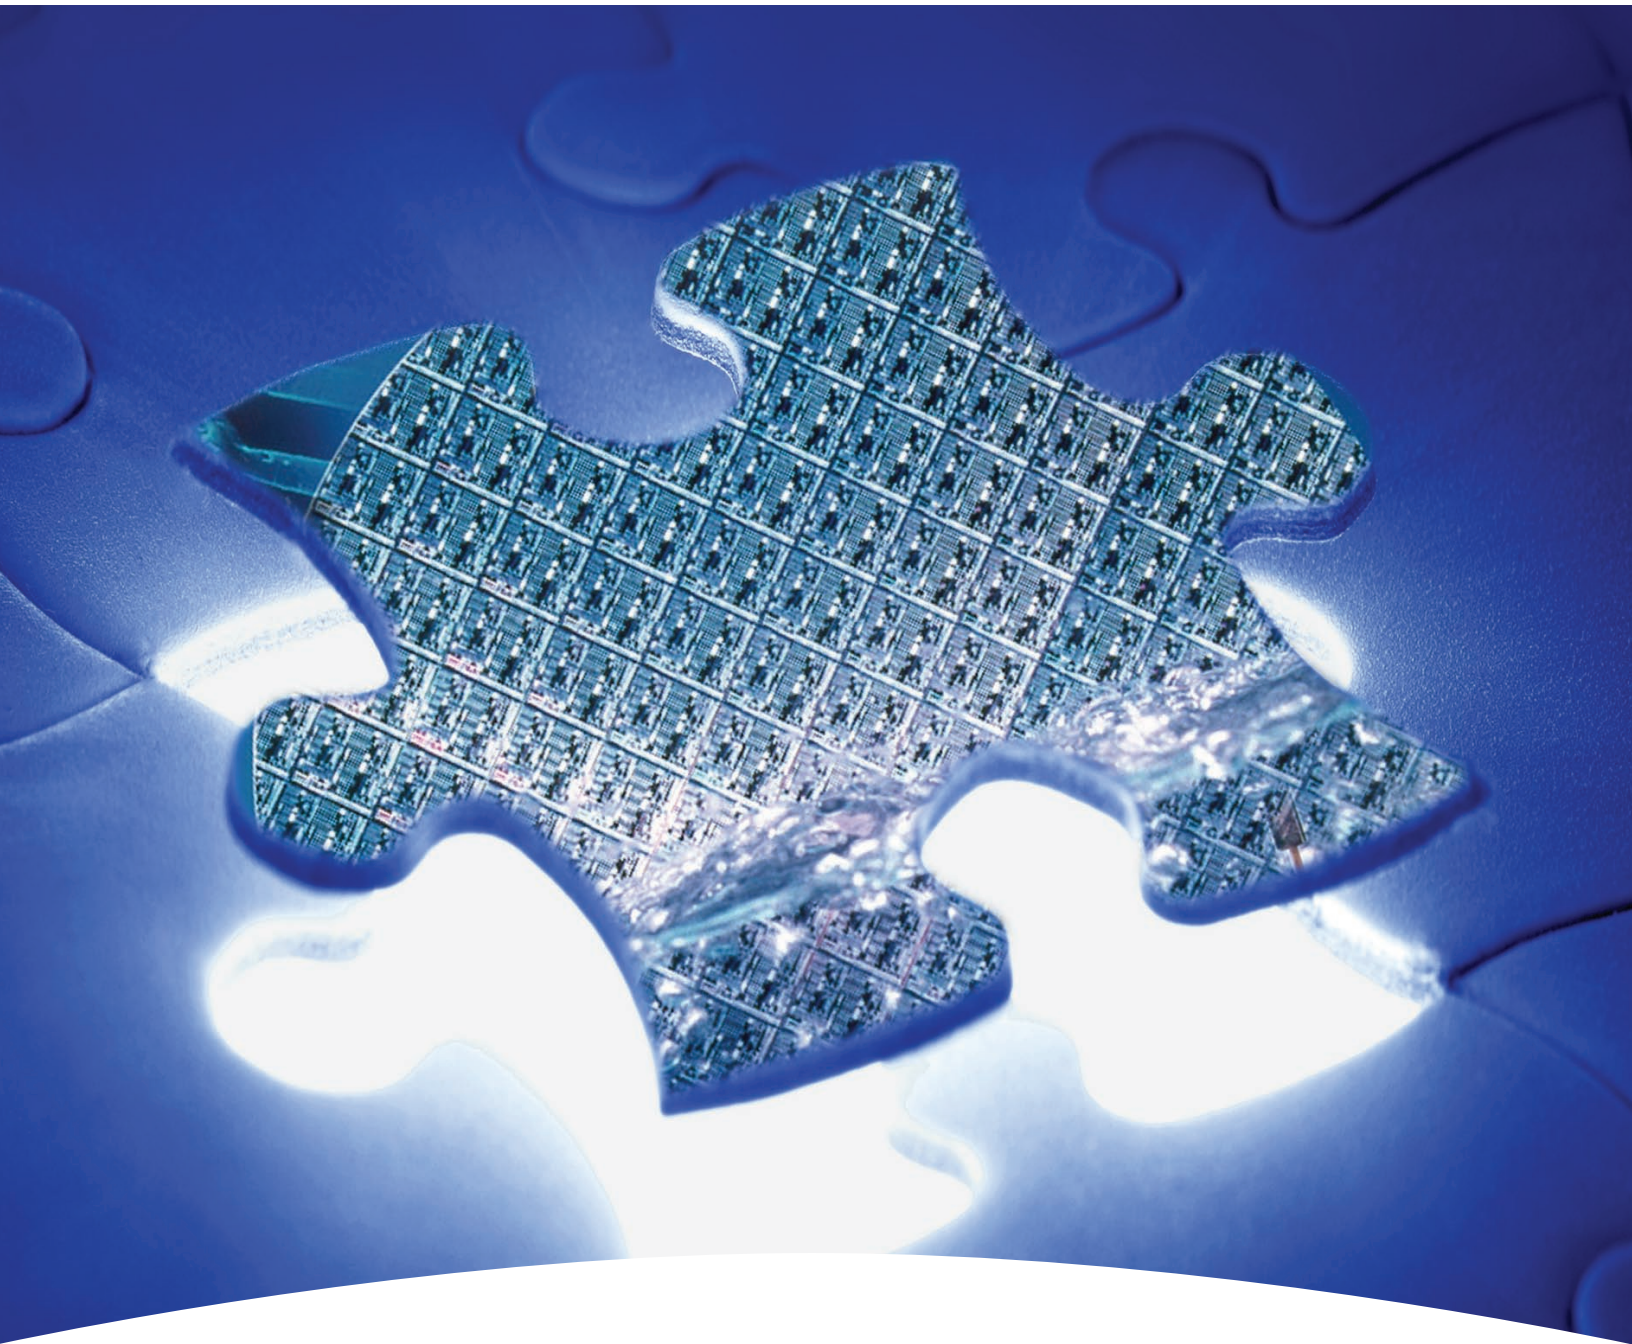

**Honeywell Advanced
Cleaning Technology**

Honeywell Advanced Cleaning Technology

**HIGHLY SELECTIVE
CLEANING CHEMISTRIES*
FOR COPPER DUAL DAMA-
SCENE PROCESSING**

BENEFITS

- Removal of polymer sidewall residue
- Copper and porous Low-k compatible
- Removal of post etch and ash residues
- Removal of CuO_x, CuF_x residues
- Non-volatile, non-flammable formulations
- Low process temperature (<35°C)
- Short process time (60 – 90 sec.)
- Compatible with existing manufacturing equipment

*patent pending

DEMO CONDITIONS

Blanket Film Preparation Conditions:

- Wafers prepared at the Honeywell STAR center in Sunnyvale, CA
- iBARC films deposited using a TEL Act 8 SOG coater

iBARC248

Bake sequence: 60sec at 130°C, 60sec at 200°C, 60sec at 250°C
Etch conditions: (TEL Unity 2 DRM): time = 10sec, power = 1500W, pressure = 40mT (10sccm C₄F₈, 50sccm CO, 200sccm Ar, 4sccm O₂, 100sccm N₂)
Ash conditions: (Gasonics L-3510): time = 60sec, power = 900W, pressure = 1200mT (2000sccm O₂, 100sccm N₂)



RESPONSIBLE CARE
OUR COMMITMENT TO SUSTAINABILITY

Honeywell Electronic Materials

USA: 1-509-252-2102

China: 86-21-28942481

Germany: 49-5137-999-9199

Japan: 81-3-6730-7092

Korea: 82-2-3483-5076

Singapore: 65-6580-3593


Taiwan: 886-3-6580300 ext.312

www.honeywell.com/sm/em

DUO & T-28 Cleaning Technology

PRE

POST

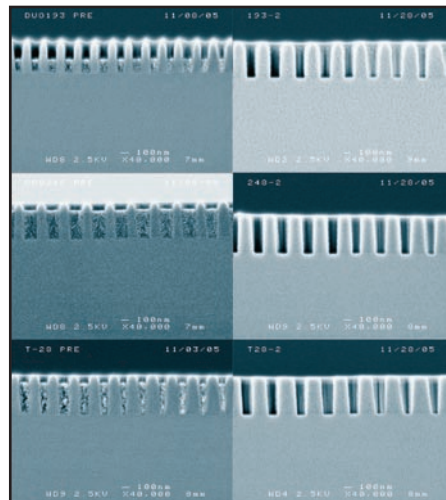


**Complete Dissolution
of Via Fill iBARC****

Post Ash Residue Remover

PRE


POST

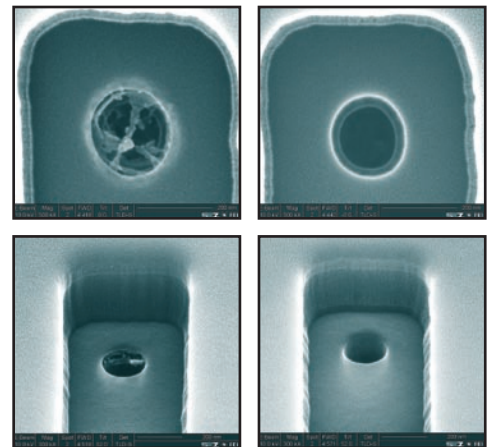

**Porous MSQ Dielectrics;
65nm Reticle**

BLANKET FILM STUDIES

Selectivity iBARC248 :ILD @ 35°C

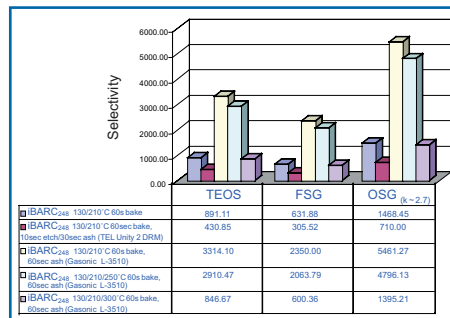

Static Beaker Tests Honeywell iBARC Cleaner @ 35°C

iBARC193

Bake sequence: 90sec at 130°C, 90sec at 200°C, 90sec at 300°C
Etch conditions: (TEL Unity 2 DRM): time = 10sec, power = 1500W, pressure = 40mT (10sccm C₄F₈, 50sccm CO, 200sccm Ar, 4sccm O₂, 100sccm N₂)
Ash conditions: (Gasonics L-3510): time = 60sec, power = 900W, pressure = 1200mT (2000sccm O₂, 100sccm N₂)

Wet Etch Conditions:


- Wafers processed at SEZ America's Research and Development Lab in Phoenix, AZ
- Blanket wafers were processed on a variation of the SEZ Spin Processor 4200, a multi-task single wafer processing machine used for front side wafer treatment on 200mm wafers.

For more information on SEZ equipment, please contact SEZ: contact_us@sez.com

- Chuck speed: 600 rpm
- Flow rate: 1 L/min
- Temperature ranged from 25°C to 65°C depending on POR of chemistries tested
- Process time ranged between 20 sec and 2 min depending on initial thickness and removal rate of iBARCs tested


Although all statements and information contained herein are believed to be accurate and reliable, they are presented without guarantee or warranty of any kind, express or implied. Information provided herein does not relieve the user from the responsibility of carrying out its own tests and experiments, and the user assumes all risks and liability for use of the information and results obtained. Statements or suggestions concerning the use of materials and processes are made without representation or warranty that any such use is free of patent infringement and are not recommendations to infringe any patent. The user should not assume that all toxicity data and safety measures are indicated herein or that other measures may not be required. PB1331011Rev6 ©2011 Honeywell International Inc.

Selectivity iBARC193 :TEOS @ 35°C

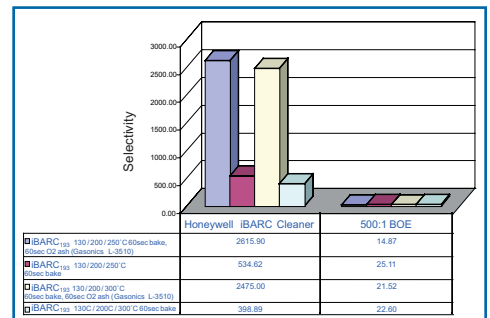

Static Beaker Tests Honeywell iBARC Cleaner @ T = 35°C

Post Plasma Treatment Selectivity iBARC :TEOS

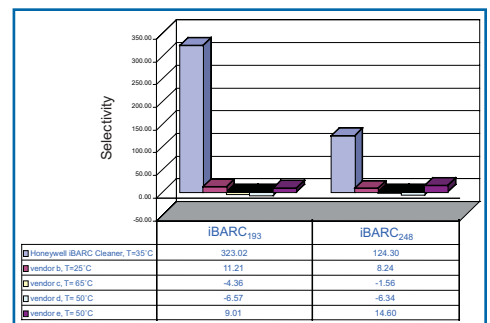

Etched and Ashed Blanket Films

* patent pending
** Inorganic Bottom Anti-Reflective Coating

Honeywell